# Bilge

- · inspect through-hulls and ensure seacocks are working
- · check auto and manual operation of bilge pumps
- · check trim tab reservoir for leaks and fill
- replace absorbent pad in the bilge and check for signs of fluid leaks

#### Safety Equipment

- · replace fire detector batteries
- replace CO/CO2 detector batteries
- check fire extinguishers
- check all PFD's are in good condition and cartridges do not need to be replaced
- · check flare expiration dates
- check throwable devices condition and location
- replenish first aid kit and replace expired items
- · ensure all required safety equipment is onboard
- check flashlights

#### Deck Hardware and Hull

- · check deck hardware fittings for tightness and corrosion
- check rail stanchions
- · check life rings and heaving lines
- · clean lazarette hatch seals and tracks
- · check zincs and replace as required
- · clean Bimini and covers- lube snaps if necessary
- check all exterior lights
- test horn
- · check window wiper blades for cracks and deterioration
- remove anchor chain from locker and inspect rode, shackles, and length markers
- clean and oil windlass
- · check O-ring on water, waste and fuel caps
- · clean, check for cracks, and lightly oil port hole gaskets
- inspect shore power cord and connectors
- inspect dock lines for wear
- · check all antenna mounts



#### **Freshwater System**

- · Add bleach to water tanks
- · inspect air vent line to ensure line is clear
- inspect waterlines for leaks
- · test pump operation
- replace in-line filter
- inspect hot water heater
- · water maker- run and service as necessary

# Head

- · check operation and service as required
- inspect head hoses and clamps
- · replace breather tube filter
- ensure breather vent is not blocked
- · check Y valve and macerator
- · inspect sink hoses and clamps
- clean shower sump pumps and filters

# **Electrical System**

- · check battery condition and fluid levels, and clean terminals
- Service generator oil/filter, impeller, belts, hose clamps...
- inventory fuses onboard and replace as needed

# Engines

- · check and clean sea strainers
- inspect raw water pump impeller and replace if needed
- · check engine oil- add or change if needed
- check transmission fluid- add or change if needed
- · check coolant, coolant overflow bottle fluid level, and hose condition
- · replace fuel filters if needed
- · check drive belt condition and tension
- · check and tighten all hose clamps
- inspect belt tension bearing
- inspect for fuel leaks
- check pencil zincs in cooling system and replace if flaking
- · flush heat exchanger, gear oil cooler, and raw-water after cooler



#### SPRING MAINTENANCE TO DO

- ensure engine mounts and drive coupling nuts are tight
- check exhaust clamps and hoses
- Inventory all belts, hoses, impellers, filters, ....

#### **Steering System**

- check reservoir level
- · check mechanical systems for wear and rust
- inspect and lube cables and linkage

# Furnace/Air Conditioning

- · vacuum electric heaters
- replace filter

# Tender

- · clean and inspect tender- lights, pumps
- check tender tie downs
- service tender engine- oil, fuel, ...
- · inspect and lube davit
- · check davit tackle

#### Spare Parts and Tools

- Replace all essential spares for the season- hoses, belts, impellers, fuses,
- bulbs, batteries, filters, spill pads, ....)
- ensure basic tools are onboard

